

Lexan Fixed Mounting Kit

Hardware brackets are included with composite exterior shutters to install on the home in a fixed position.

Mounting hardware included (per shutter):

2 PolyCarbonite "L" Brackets the same width as shutter


2 PolyCarbonite "L" Brackets 2" tall if shutter is over 55" in height

4 Stainless Steel 1" Screws (6 if shutter exceeds 55")

4 Stainless Steel 2" Screws (6 if shutters exceed 55")



Video
Instructions

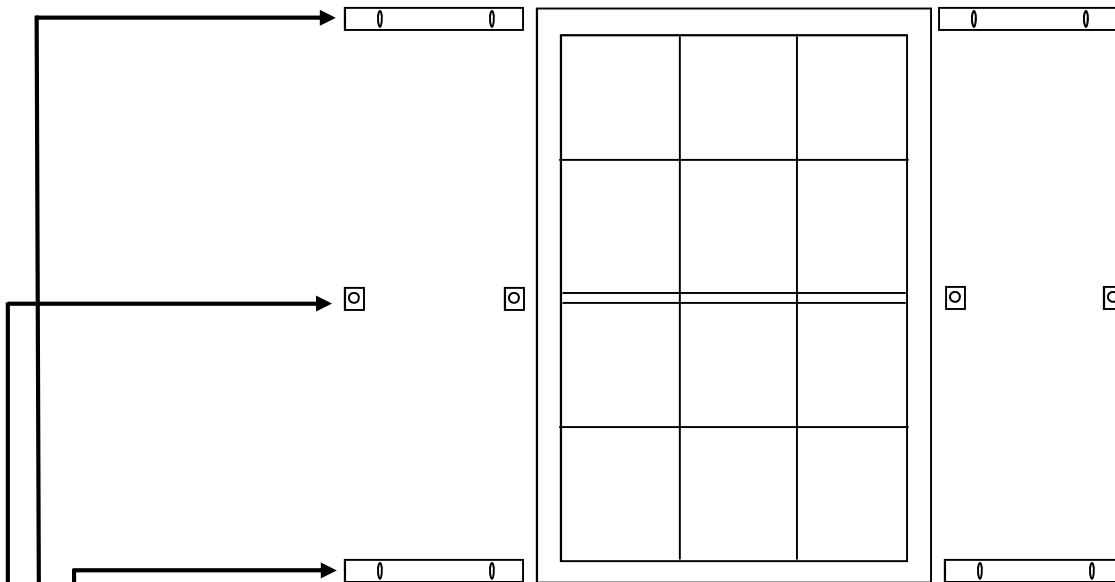

Tools Needed

Level
Marker
Power drill
#2 Phillips bit
5/32" drill bit
1/4" drill bit
1/8" drill bit
Screwdriver
Ladder
Work bench

Instructions

Determine proper position for mounting brackets using above diagram. Drill 1/8" holes in house for long screws included in packet. (Drill 5/16" hole to insert plastic anchors if in masonry.) Screw the bracket to the wall.

Hold the shutter on the lower bracket and locate the top bracket. Drill holes for top brackets. Screw the bracket to wall.

If shutter exceeds 55", mount additional small side brackets as shown in center of shutter.

Place shutter on lip of bracket and align the pre-drilled hole in the bracket with the center of the shutter depth (5/8" from the back of the shutter). Mark the position of all four pilot holes with a marker at the top and bottom of the shutter. Remove the shutter and use a 5/32" bit to drill all of the pilot holes at least 1" deep.

DO NOT insert screws without pre-drilling; the material may split.

Return the shutter to the window edge and insert the short screws through the bracket and into the shutter panel. Hand tighten all four screws snugly, but do not over-tighten.



800-483-5028

S H U T T E R L A N D . C O M